



The hub cannot turn and the clutch is burnt



Damaged bracket / fixation

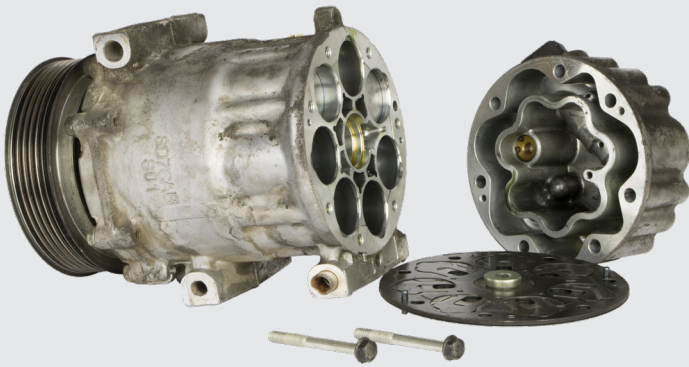

Dismantled

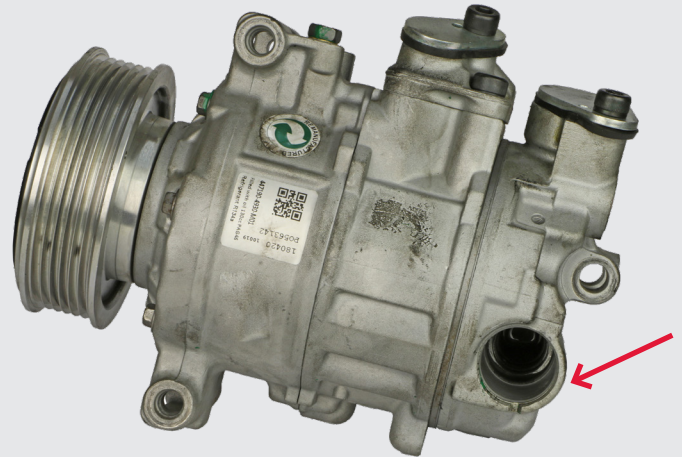


Missing control valve


Core acceptance criteria AC compressors: Rejected

Rejected


1. Cores must be returned in the original box.
2. Protecting items (caps, covers, foam protectors etc.) must be installed on the core in the same way as they were installed on the remanufactured part.
3. Please view more details on our core acceptance criteria on our homepage.

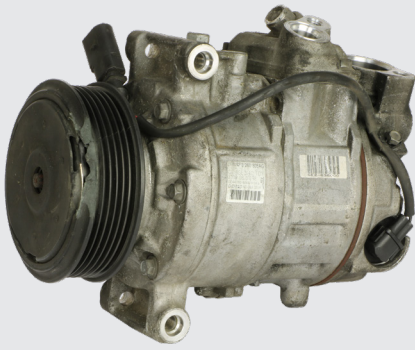


Broken pulley

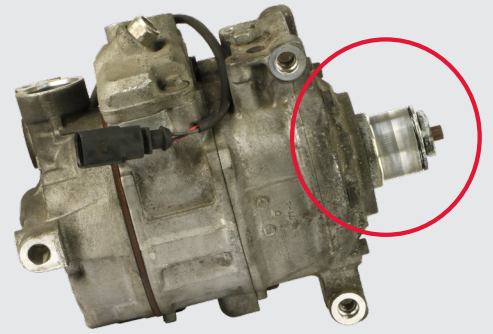


Missing pulley

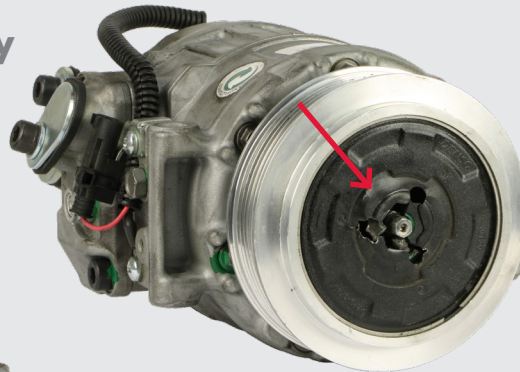

Broken hub

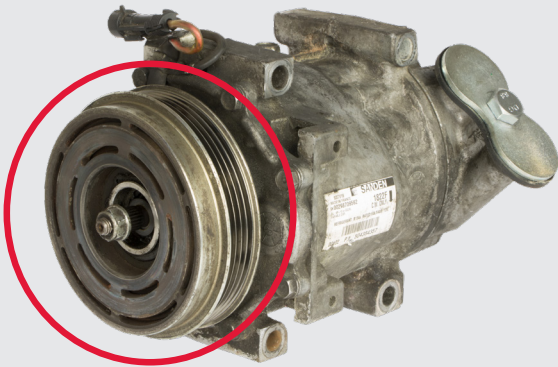

Missing hub

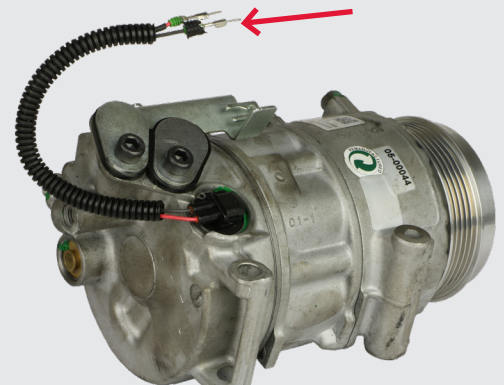

Missing plug

Core acceptance criteria AC compressors: Reduced

Reduced

1. Cores must be returned in the original box.
2. Protecting items (caps, covers, foam protectors etc.) must be installed on the core in the same way as they were installed on the remanufactured part.
3. Please view more details on our core acceptance criteria on our homepage.